



1

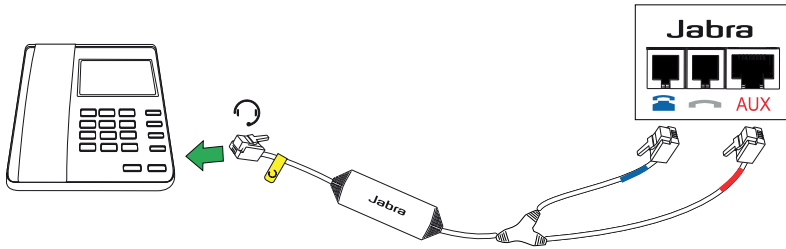

2 Set dial tone to position **A** on headset base.

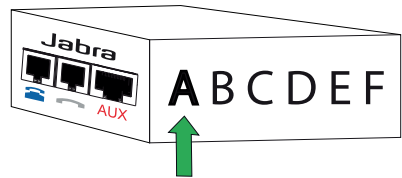

3 If the headset base requires manual configuration, set the Electronic Hook Switch setting to “**DHSG**” Refer to [jabra.com/support](http://jabra.com/support) for more information

